

L-DCS - Local Departure Control System

Edge Airport France

Table of Contents

L-DCS - Local Departure Control System

Features

 Description

Weight & balance

 LDCS - Main Screen

Cabin Plans

PNL -Integrating passenger lists

 Check-in

 Automatic flight selection

 Boarding

 Loadsheet

Edge Airport France

L-DCS - Local Departure Control System



IATA / CUPPS compliant

Features

- integration of IATA messages - PNL, ADL...;
- graphical management of cabin plans;
- passenger tracking (PAXTracer);
- supports APIS and EBorders ;
- generating and sending operational messages PFS, LDM, FTL, ETL ...;
- baggage reconciliation;
- Weight & Balance;
- generate load sheets.

Description

Airport Manager LDCS is a passenger check-in system for low-cost airlines. Chaque banque d'enregistrement peut gérer simultanément plusieurs vols. Each check-in workstation desk can simultaneously register several flights.

The programme is compatible with the use of multiple peripherals.

- MS : Magnetic Swipe Reader ;
- OC : LePassport Readers (Optical Character Reader) ;
- BC : Bar Code Reader;
- BP : Boarding Pass Printer (BPP) ;
- BT : Baggage Tag Printer (ATB);
- BG : Boarding Gate Reader (BGR) ;
- PR : Matrix printers for operational documents.

Weight & balance

The L-DCS includes a «Weight & Balance» module, allowing the calculation of load and trim results. It calculates the load and trim and produces the plane loading expressed in %MAC. The results are sent in Excel spreadsheets, which produces a load sheet.

Use of 'Weight & Balance "module is subject to the certification requirements between Edge-airport and airlines.

LDCS - Main Screen

Flight list per day

IATA Messages for each flight



Cabin Plans


The graphic tool facilitates the creation of a cabin plan:

- management of 2 flight decks (principal and superior (B747 or A380));
- multi-classing of passengers;
- positioning of emergency exits;
- blocking of seats;
- zone management



Automatic flight selection


By reading a passenger's passport, the program will automatically find the flight on which the passenger is travelling.

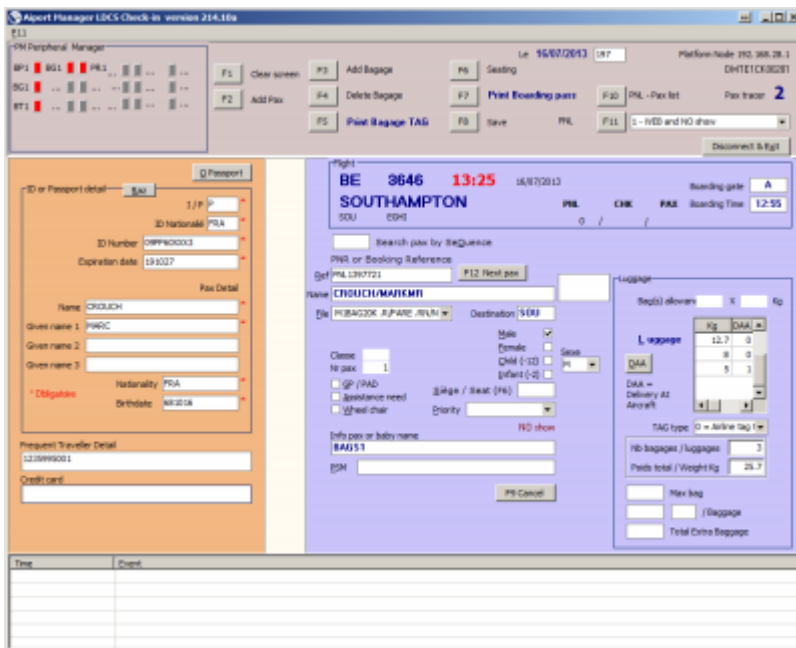

Boarding

L-DCS provides the ability to connect up to 3 BGRs thus allowing fast boarding. The 3rd BGR can be a wireless barcode reader or an automatic gate.

The software can also be used without BGR. Just enter the sequence number of each boarding pass to board a passenger.

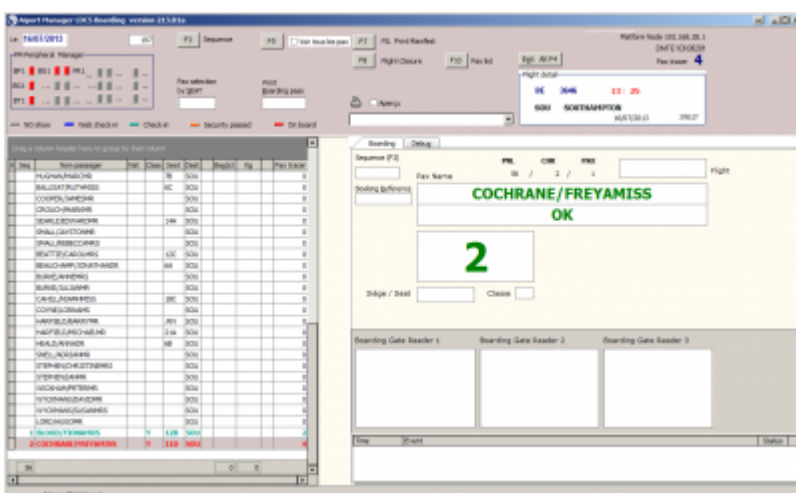

Loadsheet

For companies certified to the "Weight & Balance" system, it is possible to generate loadsheet in Excel files.

LOAD AND TRIM SHEET F-LDCS

BASIC WEIGHT 13 411 Corrections + Corrected basic weight 13 530 TAKEOFF FUEL + 2 230 Operational weight 16 190		FLT No: DATE: 21-06-17 A/C: ATR72-500 CPT: CRW:	DESTINATION: ORY MAXIMUM WEIGHT TAKEOFF FUEL LIMITATION (Lowest of the 3) OPERATIONAL WEIGHT LOADING																																																														
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th rowspan="2">DEST</th> <th colspan="2">PASSENGERS</th> <th rowspan="2">TOTAL WEIGHT</th> <th colspan="3">CARGO</th> </tr> <tr> <th>AD</th> <th>CH</th> <th>LD</th> <th>BD</th> <th>APT</th> </tr> </thead> <tbody> <tr> <td rowspan="5">HAH</td> <td>B</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>C</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>M</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>T</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>TR</td> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table>		DEST	PASSENGERS		TOTAL WEIGHT	CARGO			AD	CH	LD	BD	APT	HAH	B	0	0	0	0	0	C						M						T	0	0	0	0	0	TR						<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>MAXIMUM WEIGHT</th> <th>Zero fuel</th> <th>Takeoff</th> <th>Landing</th> </tr> </thead> <tbody> <tr> <td>TAKEOFF FUEL</td> <td>22 330</td> <td>22 330</td> <td>22 330</td> </tr> <tr> <td>LIMITATION (Lowest of the 3)</td> <td>22 030</td> <td>22 500</td> <td>22 000</td> </tr> <tr> <td>OPERATIONAL WEIGHT</td> <td>16 190</td> <td>16 190</td> <td>16 190</td> </tr> <tr> <td>LOADING</td> <td>6 951</td> <td>6 951</td> <td>6 431</td> </tr> </tbody> </table>	MAXIMUM WEIGHT	Zero fuel	Takeoff	Landing	TAKEOFF FUEL	22 330	22 330	22 330	LIMITATION (Lowest of the 3)	22 030	22 500	22 000	OPERATIONAL WEIGHT	16 190	16 190	16 190	LOADING	6 951	6 951	6 431
DEST	PASSENGERS		TOTAL WEIGHT	CARGO																																																													
	AD	CH		LD	BD	APT																																																											
HAH	B	0	0	0	0	0																																																											
	C																																																																
	M																																																																
	T	0	0	0	0	0																																																											
	TR																																																																
MAXIMUM WEIGHT	Zero fuel	Takeoff	Landing																																																														
TAKEOFF FUEL	22 330	22 330	22 330																																																														
LIMITATION (Lowest of the 3)	22 030	22 500	22 000																																																														
OPERATIONAL WEIGHT	16 190	16 190	16 190																																																														
LOADING	6 951	6 951	6 431																																																														
LAST MINUTE CHANGE LMC TOTAL LMC +/-: 0		BASIC INDEX CORRECTION 3rd crew mbr index 8.8 WEIGHT VARIATION D E F INDEX CORRECTION CORRECTED INDEX -12.00	ZONES CABIN A 18 1335 CABIN B 21 1300 CABIN C 12 815 FWD CARGO 225 AFT CARGO 330 FUEL 2230																																																														
Cargo weight (KG) A 550 Passengers weight (KG) B 2 617 LOADING A + B 3 167 CORRECTED BASIC WEIGHT 13 530 ZERO FUEL WEIGHT 16 190 MAX 20 890 TAKEOFF FUEL 2 230 TAKEOFF WEIGHT 30 330 MAX 22 890 TRIP FUEL 250 LANDING WEIGHT 20 885 MAX 22 330		FUEL LIMIT GRAPH 																																																															

From: <https://oldwiki.embross-airport-services.com/> - Documentation Embross (ex Edge Airport)

Permanent link: <https://oldwiki.embross-airport-services.com/doku.php?id=en:solutions:ldcs1&rev=1504873285>

Last update: 08/09/2017 14:21

Edge Airport France

Airport Manager Solutions

Phone: +33 553 801 366

Service commercial : contact@edge-airport.com

Support technique : support@edge-airport.com

Edge Airport France SAS au capital de 150 000 €

RCS Bergerac 529 125 346 Les Lèches TVA : FR53529125346 / EORI : FR52912534600039

Tel : +33(0)553 801 366 contact@edge-airport.com www.edge-airport.com